


Descargar NETILITY de la página web Oficial <http://www.megatec.com.tw/>

Correspondiente al sistema operativo donde se instala el programa.

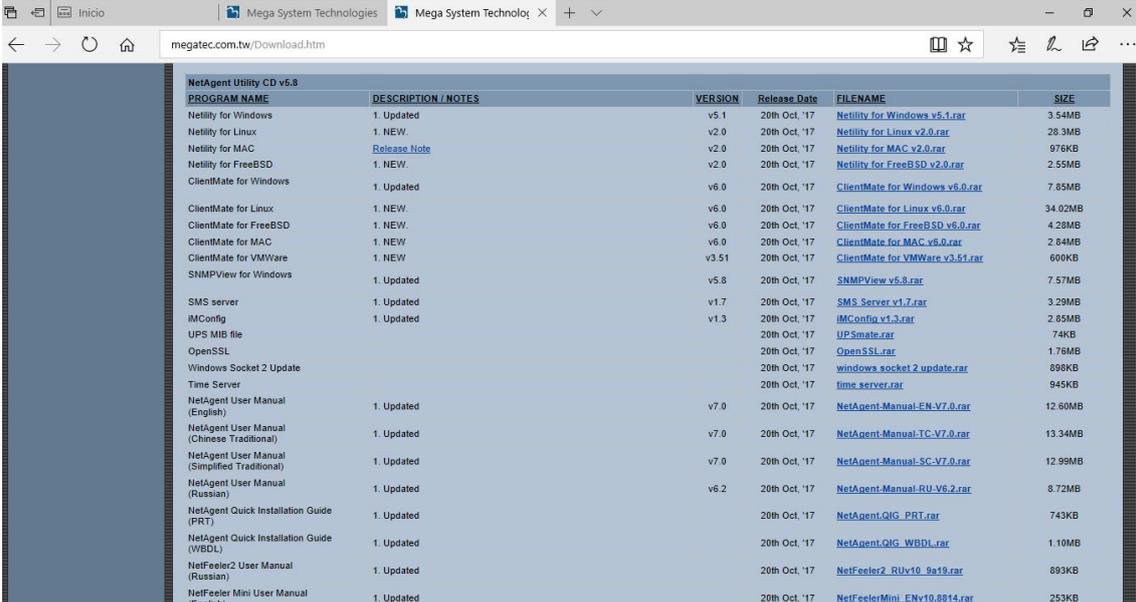

PROGRAM NAME	DESCRIPTION / NOTES	VERSION	Release Date	FILENAME	SIZE
NetAgent Utility CD v5.8					
Netility for Windows	1. Updated	v5.1	20th Oct, '17	Netility for Windows v5.1.rar	3.54MB
Netility for Linux	1. NEW.	v2.0	20th Oct, '17	Netility for Linux v2.0.rar	28.3MB
Netility for MAC	Release Note	v2.0	20th Oct, '17	Netility for MAC v2.0.rar	976KB
Netility for FreeBSD	1. NEW.	v2.0	20th Oct, '17	Netility for FreeBSD v2.0.rar	2.55MB
ClientMate for Windows	1. Updated	v6.0	20th Oct, '17	ClientMate for Windows v6.0.rar	7.85MB
ClientMate for Linux	1. NEW.	v6.0	20th Oct, '17	ClientMate for Linux v6.0.rar	34.02MB
ClientMate for FreeBSD	1. NEW.	v6.0	20th Oct, '17	ClientMate for FreeBSD v6.0.rar	4.28MB
ClientMate for MAC	1. NEW	v6.0	20th Oct, '17	ClientMate for MAC v6.0.rar	2.84MB
ClientMate for VMWare	1. NEW	v3.51	20th Oct, '17	ClientMate for VMWare v3.51.rar	600KB
SNMPView for Windows	1. Updated	v5.8	20th Oct, '17	SNMPView v5.8.rar	7.57MB
SMS server	1. Updated	v1.7	20th Oct, '17	SMS Server v1.7.rar	3.29MB
IMConfig	1. Updated	v1.3	20th Oct, '17	IMConfig v1.3.rar	2.85MB
UPS MIB file			20th Oct, '17	UPSmate.rar	74KB
OpenSSL			20th Oct, '17	OpenSSL.rar	1.76MB
Windows Socket 2 Update			20th Oct, '17	windows socket 2 update.rar	898KB
Time Server			20th Oct, '17	time server.rar	945KB
NetAgent User Manual (English)	1. Updated	v7.0	20th Oct, '17	NetAgent-Manual-EN-V7.0.rar	12.60MB
NetAgent User Manual (Chinese Traditional)	1. Updated	v7.0	20th Oct, '17	NetAgent-Manual-TC-V7.0.rar	13.34MB
NetAgent User Manual (Simplified Traditional)	1. Updated	v7.0	20th Oct, '17	NetAgent-Manual-SC-V7.0.rar	12.99MB
NetAgent User Manual (Russian)	1. Updated	v6.2	20th Oct, '17	NetAgent-Manual-RU-V6.2.rar	8.72MB
NetAgent Quick Installation Guide (PRT)	1. Updated		20th Oct, '17	NetAgent.QIG_PRT.rar	743KB
NetAgent Quick Installation Guide (WBDL)	1. Updated		20th Oct, '17	NetAgent.QIG_WBDL.rar	1.10MB
NetFeeler2 User Manual (Russian)	1. Updated		20th Oct, '17	NetFeeler2_RUv10_9a19.rar	893KB
NetFeeler Mini User Manual (English)	1. Updated		20th Oct, '17	NetFeelerMini_ENv10.8814.rar	253KB

Conectar el ordenador a la tarjeta SNMP mediante cable ethernet standard (no tiene que ser cruzado) y Ejecutar la aplicación Netility.



Tras esperar unos 30 segundos aproximadamente te muestra todos los datos de la tarjeta, en la parte de abajo el Hardware Versión y Firmware Versión. Es posible que tenga que pulsar al botón de “ Refresh List “.

Descargar la versión del Firmware correspondiente a tu tarjeta Hardware Versión desde la página www.hectronica.com en el área de descargas. Dependiendo del momento, es posible que tenga que elegir entre SAI trifásico o SAI monofásico, si solo existe una versión de firmware, es adaptada a SAI trifásico y monofásico.

5. NEW (for BX model only): Support USB GPRS modem, Wireless Dongle and NetSwitch

v3.0 @ 1st Sept, 2010:
1. NetAgent's firmware based on the functionalities of NetAgent7 v2.43
2. ADDED: HTTPS and SSH.
3. ADDED: SNMP v3

NetAgent II

NetAgent Firmware download procedure:
1. Check your CURRENT FIRMWARE Version (Note)
2. Locate your MODEL NUMBER shown at the bottom of your NetAgent device.
3. Choose the correct firmware version corresponding to your Model Number.

NOTE:
If your NetAgent Firmware is either V1.7, V2.24 or V2.30, you must upgrade your firmware PROGRESSIVELY.
Example: If you now have V2.24, you must FIRST download and upgrade to V2.30, then to V2.33 and finally to latest version below.
WARNING: Skipping one or more firmware versions will damage NetAgent and result in a crash.

Version Upgrade: From V1.7 to V2.24 | from V2.24 to V2.30 | from V2.30 to V2.33

Please download your respective Firmware against your Model Type from the table below:

Model	Firmware name	Release Date
DP520 (internal card)	2.48.DP520.WEST.rar	9th May, 2014
DP522 (external card)	2.48.DP520.EAST.rar	
DP532 (external w/ LCD)		
DT520 (internal card)	2.48.DT520.WEST.rar	9th May, 2014
DT522 (external card)	2.48.DT520.EAST.rar	
DM520	2.48.DM520.rar	9th May, 2014
CP503 (external card)	2.48.CP504.WEST.rar	9th May, 2014
CP504 (internal card)	2.48.CP504.EAST.rar	
CT503 (external card)	2.48.CT504.WEST.rar	9th May, 2014
CT504 (internal card)	2.48.CT504.EAST.rar	
BP505 (external card)	2.48.BP506.WEST.rar	9th May, 2014
BP506 (internal card)	2.48.BP506.EAST.rar	
BT505 (external card)	2.48.BT506.WEST.rar	9th May, 2014
BT506 (internal card)	2.48.BT506.EAST.rar	
BT306	2.47.BT306.rar	31st May, 2013

Este es un ejemplo, pero el nombre del firmware cambia en función de la versión este caso hay que descargar la DP520 (internal Card)

Firmware name: *****.rar o *****.bin. Una vez descargada en el pc correspondiente, descomprimir el archivo.

Netility

Netility

Search for device's LAN IP


Serial Number	MAC Address	IP Address
3927161112	00-03-EA-13-B9-18	192.168.0.100

Hardware Version: HDY520
Firmware Version: 3.5.DY520.a
MAC Address: 00-03-EA-13-B9-18


Select 1 of 1

Buttons: Launch Web User Interface, Network Settings, Firmware Upgrade, About, Refresh List

En la aplicación Netility, seleccionar FIRMWARE UPGRADE. Se abrirá una ventana donde debe seleccionar el archivo que se ha descargado y descomprimido.

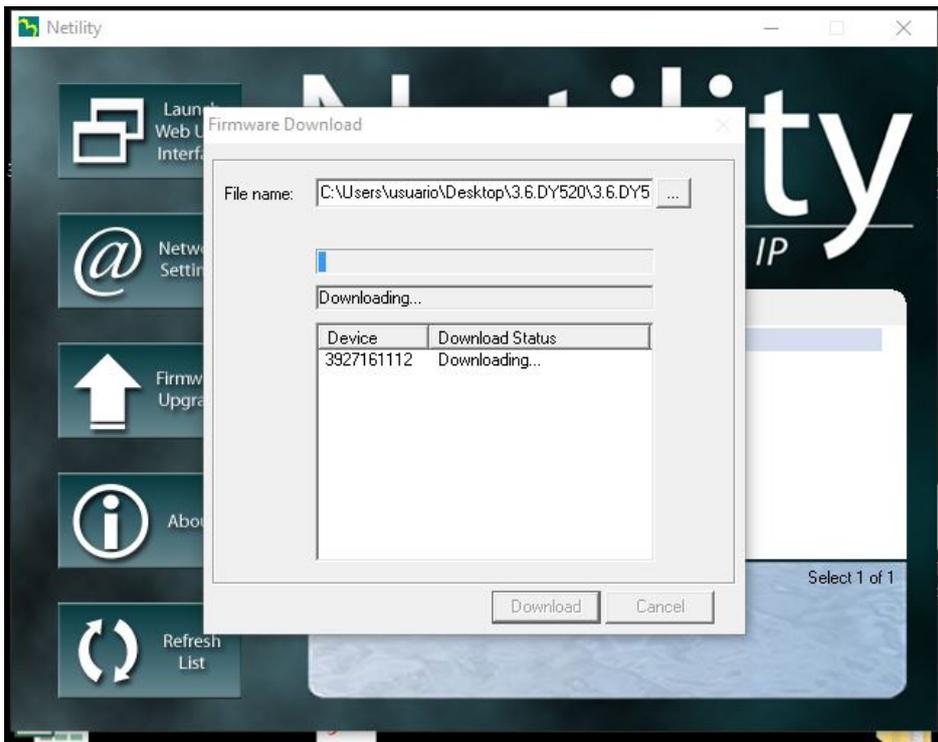

Una vez seleccionado pinchar en Download y la tarjeta empezara a actualizarse.

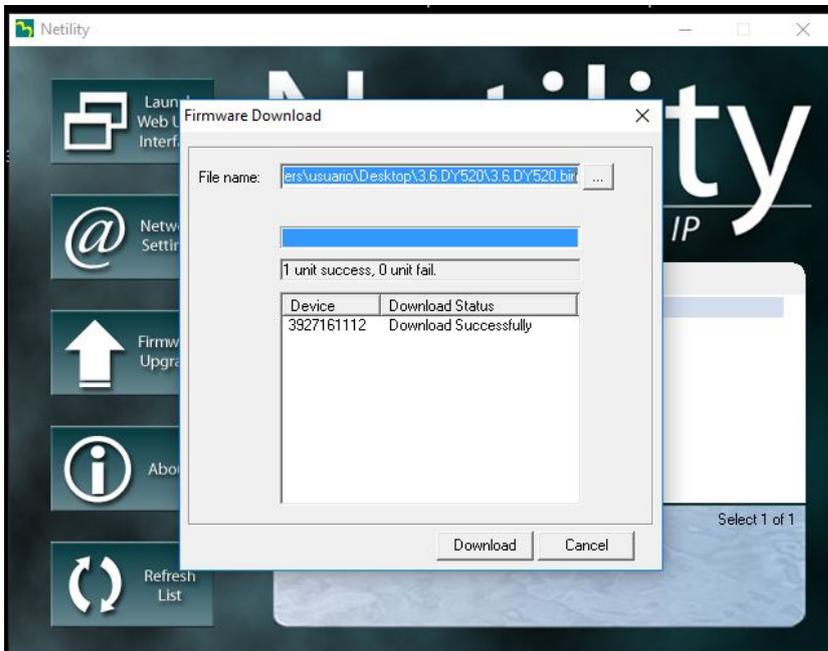

Una vez terminado el proceso, indica "Download Successfully", cerrar la ventana y comprobar en el Netility que se ha actualizado correctamente, es posible que tarde alrededor de 60 segundos en mostrarse la tarjeta ya que se está reiniciando. No desconectar durante el proceso de actualización ni actualizar con un firmware que no sea el indicado; si no la tarjeta se inutilizará y quedará inservible.